

HYTORC

TOOL MODEL: EDGE-6 PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	893	124	1211	104
1600	955	132	1295	110
1800	1079	149	1462	124
2000	1203	166	1630	138
2200	1328	184	1800	152
2400	1453	201	1970	165
2600	1579	218	2140	179
2800	1704	236	2310	193
3000	1830	253	2480	207
3200	1956	271	2652	220
3400	2083	288	2823	234
3600	2209	306	2995	248
3800	2335	323	3166	262
4000	2462	340	3337	276
4200	2589	358	3509	290
4400	2716	376	3682	303
4600	2843	393	3854	317
4800	2970	411	4026	331
5000	3097	428	4198	345
5200	3223	446	4369	358
5400	3350	463	4541	372
5600	3476	481	4713	386
5800	3603	498	4884	400
6000	3730	516	5056	414
6200	3859	534	5231	427
6400	3988	552	5406	441
6600	4117	569	5581	455
6800	4246	587	5756	468
7000	4375	605	5931	482
7200	4502	623	6103	496
7400	4629	640	6275	510
7600	4756	658	6447	524
7800	4883	675	6619	538
8000	5009	693	6791	552
8200	5136	710	6963	565
8400	5264	728	7135	579
8600	5391	746	7308	593
8800	5518	763	7480	607
9000	5645	781	7652	620
9200	5764	797	7814	634
9400	5883	814	7976	648
9600	6003	830	8137	662
9800	6122	847	8299	676
10000	6241	863	8461	690