


**TOOL MODEL: jGUN AIR 8 DUAL SPEED PLUS
JGUN-DSP-A8
PRESSURE / TORQUE CONVERSION CHART**

**ALL JGUNS HAVE THEIR OWN DEDICATED CHARTS
Please request a chart for your gun at torcgun.com/charts**

PRESSURE		TORQUE		
psi	bar	ft-lbs	kgf-m	N-m
20	1.38	1232	170	1670
25	1.72	1842	255	2498
30	2.07	2453	339	3326
35	2.41	3063	424	4153
40	2.76	3674	508	4981
45	3.10	4253	588	5766
50	3.45	4715	652	6393
55	3.79	5177	716	7019
60	4.14	5639	780	7646
65	4.48	6123	846	8301
70	4.83	6620	915	8976
75	5.17	7118	984	9651
80	5.52	7616	1053	10326
85	5.86	8112	1122	10998

NOTE: 1) Minimum 30 CFM air required to use this pneumatic torque tool. 2) Use 1/2" or 3/4" diameter hose for optimal results; minimum diameter hose to be used is 1/2".

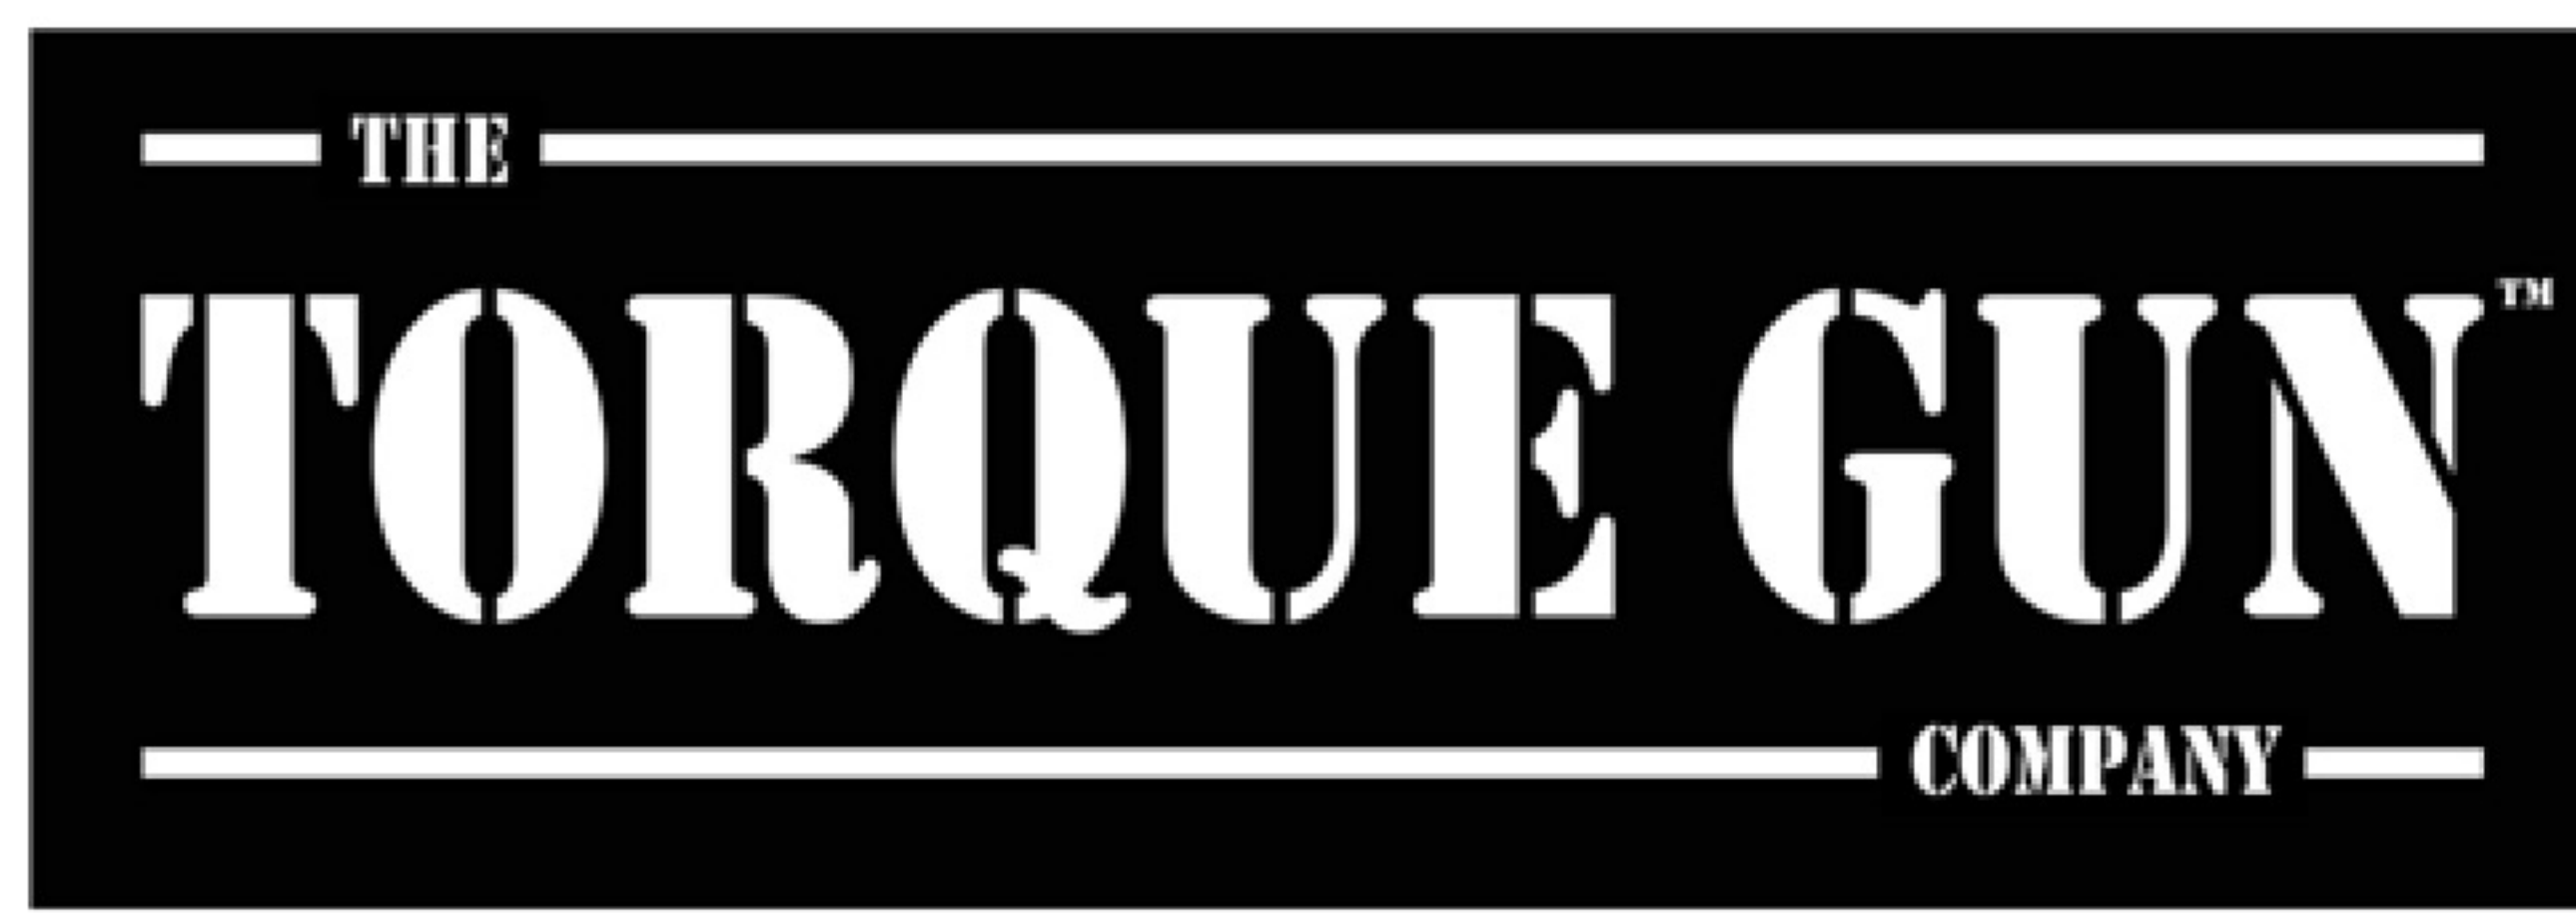

**TOOL MODEL: jGUN AIR 8 DUAL SPEED PLUS
JGUN-DSP-A8**

PRESSURE / TORQUE CONVERSION CHART

**ALL JGUNS HAVE THEIR OWN DEDICATED CHARTS
Please request a chart for your gun at torcgun.com/charts**

PRESSURE		TORQUE		
psi	bar	ft-lbs	kgf-m	N-m
20	1.38	358	50	486
25	1.72	365	50	495
30	2.07	372	51	504
35	2.41	378	52	513
40	2.76	385	53	521
45	3.10	411	57	557
50	3.45	681	94	923
55	3.79	951	132	1290
60	4.14	1222	169	1656
65	4.48	1373	190	1861
70	4.83	1441	199	1954
75	5.17	1509	209	2046
80	5.52	1577	218	2138
85	5.86	1644	227	2229
90	6.21	1709	236	2317

NOTE: 1) Minimum 30 CFM air required to use this pneumatic torque tool. 2) Use 1/2" or 3/4" diameter hose for optimal results; minimum diameter hose to be used is 1/2".